

NEVER POP LEVER REPLACEMENT KIT

69-76 Nova (All)
69 Camaro (All)

Slider guide

Retaining Tabs

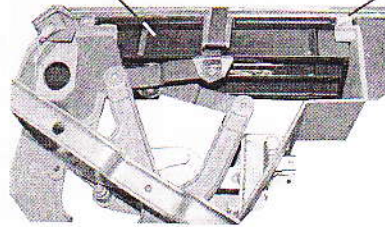


Photo 1

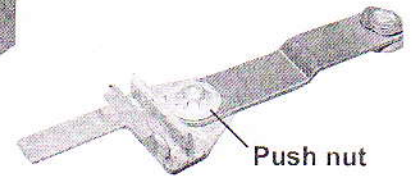


Photo 2

Push nut

- 1) Remove control head from vehicle.
- 2) Remove knobs from control head levers.
- 3) Bend four retaining tabs securing front face to control head and remove front face.
(EXTREME CAUTION: Retaining tabs are a cast product and will damage or break if bent to far. Bend tabs just far enough to remove front control face.)
Tip: We recommend using a two part epoxy type glue to reattach front face if you break the OEM retaining tabs.
- 4) Remove chrome trim panel from remainder of control panel and retain.
- 5) Remove black plastic slider guide by lifting out and sliding levers through access holes at one end.
- 6) Remove broken lever from control panel. **(See Photo 1)**
Tip: Break retaining spring washer with pliers to remove.
- 7) Install replacement lever in same position as original and secure using push nut fastener supplied in kit.
(See Photo 2) A nut driver or small socket works well to install nut.
- 8) Reinstall plastic slider guide, chrome trim panel and knobs
- 9) Check function of control head for correct mode operation.