




1. The Paint stencil kit may be applied dry

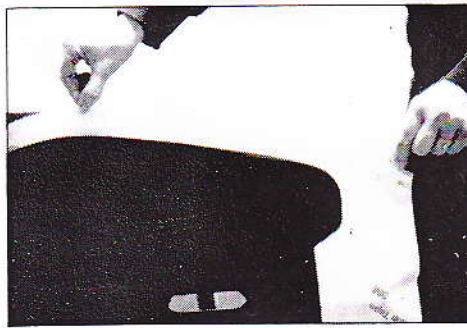


2. Carefully remove the thick backing material from each stencil. Now apply the top stencil making sure it lines up with the top of the fender and the front section.

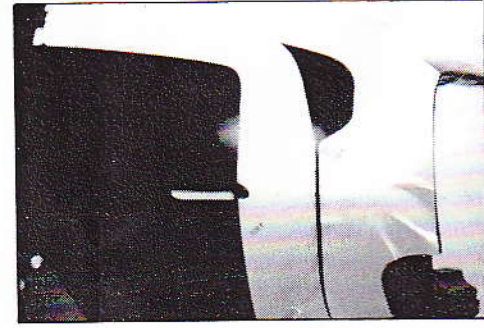



3. Now apply the bottom stencil making sure it lines up with the edge of the top stencil and the marker lamp as indicated in photo.

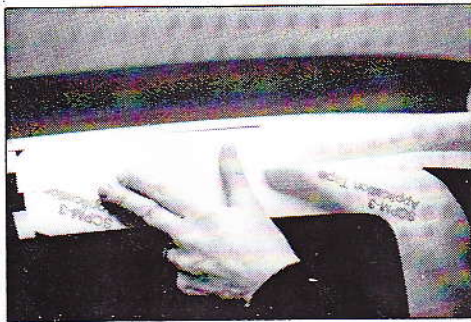


4. Use the enclosed squeegee to apply pressure to the stencil. The wet application can take 2 to 3 hrs. to dry. Now carefully remove the application tape.

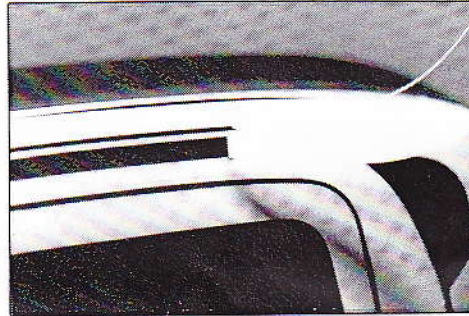


5. Now remove the sections to be painted.

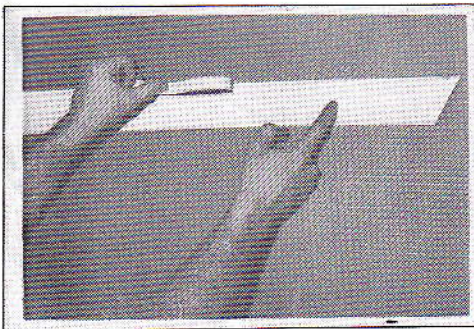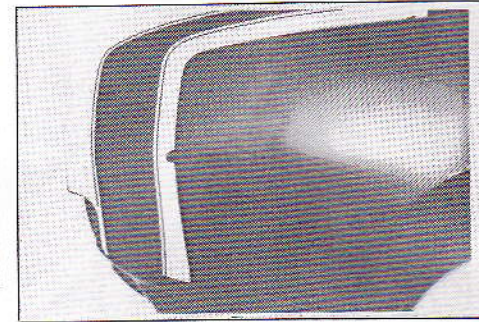

1. Position and recheck the stencil against masking tape that was placed at the peak of the fender for correct alignment.
2. Using a razor blade
 - A. Remove entire 1x2 inch sections top and bottom at edge of stencil.
 - B. Remove outer backing strips.
 - C. Remove 1/8 inch backing strips.
 - D. This will leave the entire center intact.
3. Make sure the notch on the end of the stencil is even with the edge of the fender as you apply it.

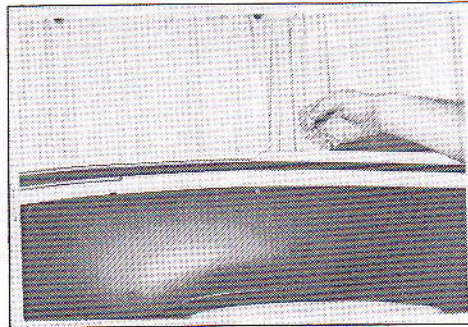

4. You may now apply the stencil to the fender. I suggest having someone help, due to the length of the stencil although it can be done alone.
5. CAREFULLY
 - A. Remove 3M application tape.
 - B. Remove entire center section.
 - C. Pull slowly and remove entire outer 1/8 inch stripe.

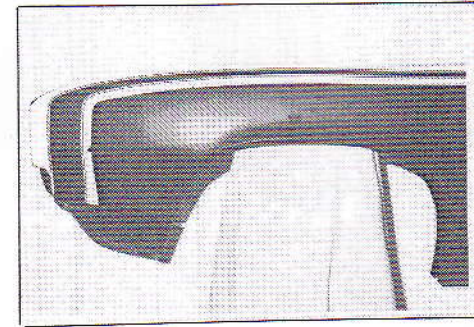

FOR KITS
 #1051019
 #1051020
 #1051021
 #1051022